

Updating Your Device


Contents

Backup Database.....	1
Perform Upgrade	3
Restoring Your Database.....	6
Reference	7

Backup Database

You should backup your database and ****download**** it from your device before upgrading.


Go to the Folio app and press the Snapshots tab.

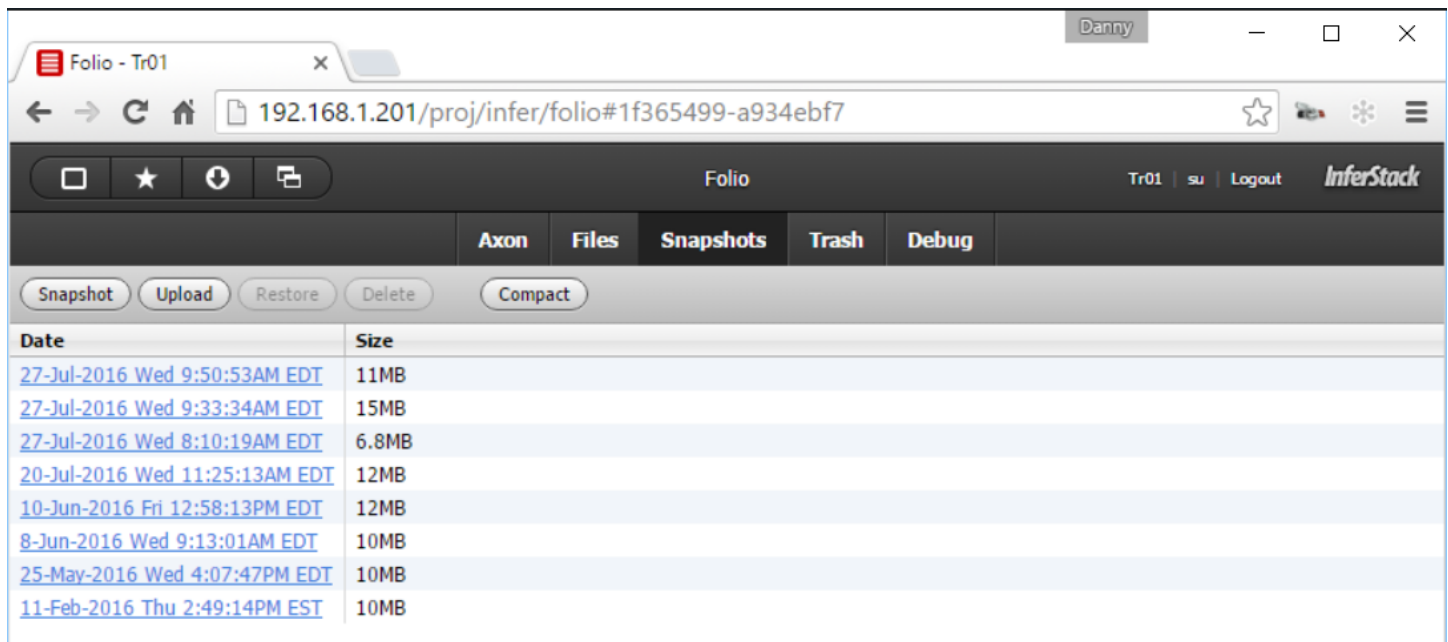

The screenshot shows a web browser window with the URL `192.168.1.201/proj/infer/folio#1f365499-a934ebf7`. The browser tab is titled "Folio - Tr01". The page header includes the "Folio" title, user "Tr01", and a "Logout" link. The main navigation bar has tabs for "Axon", "Files", "Snapshots", "Trash", and "Debug". The "Snapshots" tab is active, showing a table of database snapshots. Above the table are buttons for "Snapshot", "Upload", "Restore", "Delete", and "Compact".

Date	Size
27-Jul-2016 Wed 9:50:53AM EDT	11MB
27-Jul-2016 Wed 9:33:34AM EDT	15MB
27-Jul-2016 Wed 8:10:19AM EDT	6.8MB
20-Jul-2016 Wed 11:25:13AM EDT	12MB
10-Jun-2016 Fri 12:58:13PM EDT	12MB
8-Jun-2016 Wed 9:13:01AM EDT	10MB
25-May-2016 Wed 4:07:47PM EDT	10MB
11-Feb-2016 Thu 2:49:14PM EST	10MB

Press Snapshot to create a snapshot.

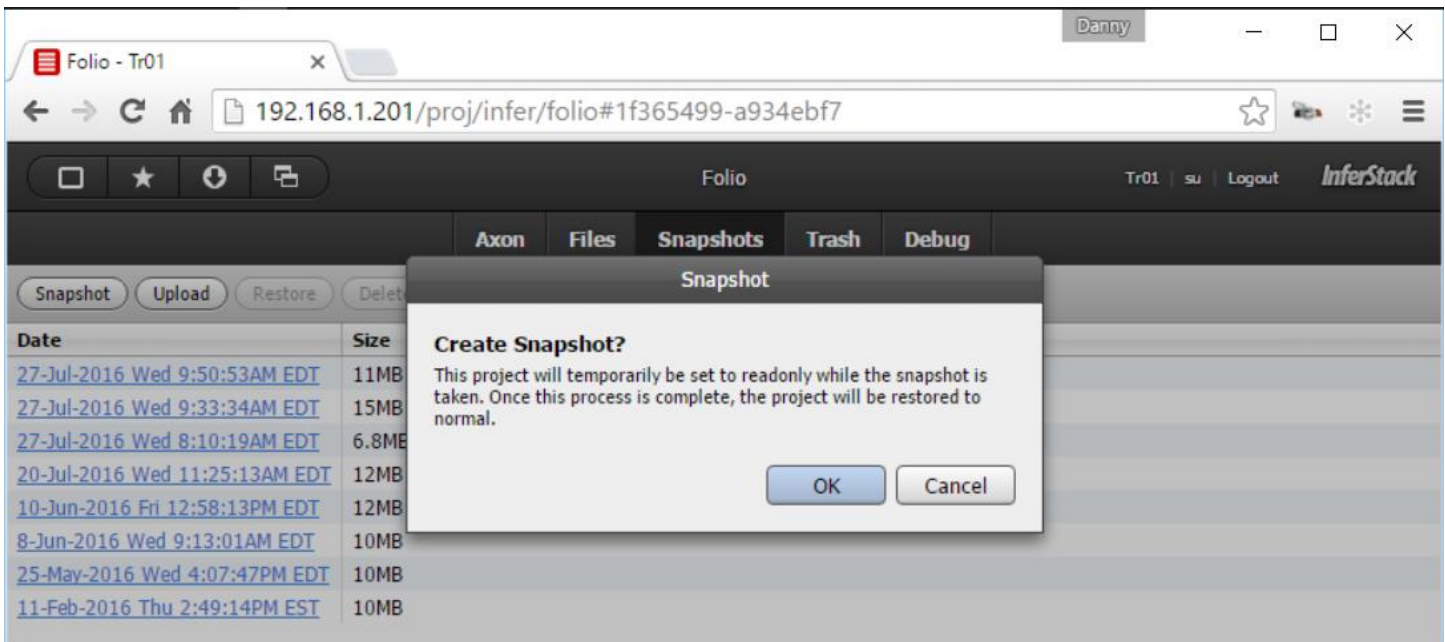


Create Snapshot?

This project will temporarily be set to readonly while the snapshot is taken. Once this process is complete, the project will be restored to normal.

OK Cancel


Date	Size
27-Jul-2016 Wed 9:50:53AM EDT	11MB
27-Jul-2016 Wed 9:33:34AM EDT	15MB
27-Jul-2016 Wed 8:10:19AM EDT	6.8MB
20-Jul-2016 Wed 11:25:13AM EDT	12MB
10-Jun-2016 Fri 12:58:13PM EDT	12MB
8-Jun-2016 Wed 9:13:01AM EDT	10MB
25-May-2016 Wed 4:07:47PM EDT	10MB
11-Feb-2016 Thu 2:49:14PM EST	10MB

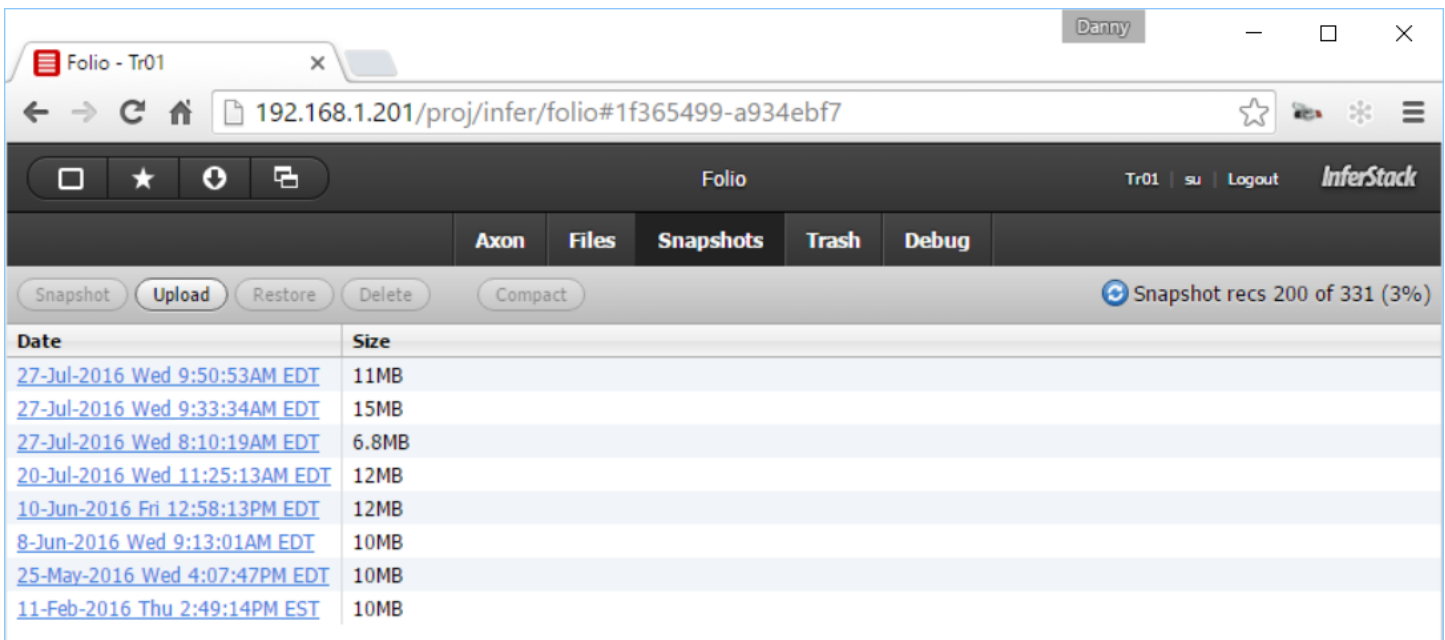

Snapshot recs 200 of 331 (3%)


Date	Size
27-Jul-2016 Wed 9:50:53AM EDT	11MB
27-Jul-2016 Wed 9:33:34AM EDT	15MB
27-Jul-2016 Wed 8:10:19AM EDT	6.8MB
20-Jul-2016 Wed 11:25:13AM EDT	12MB
10-Jun-2016 Fri 12:58:13PM EDT	12MB
8-Jun-2016 Wed 9:13:01AM EDT	10MB
25-May-2016 Wed 4:07:47PM EDT	10MB
11-Feb-2016 Thu 2:49:14PM EST	10MB


When it completes (see status in upper right), download it by selecting the link.

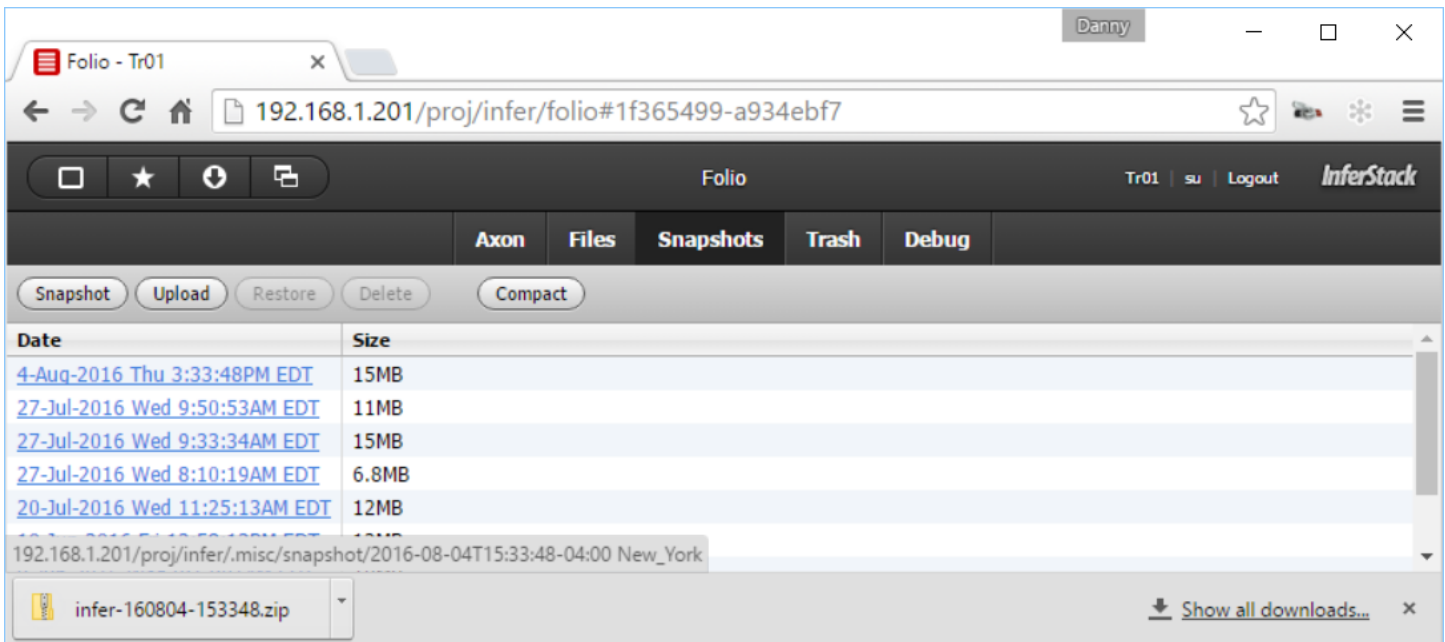



Perform Upgrade

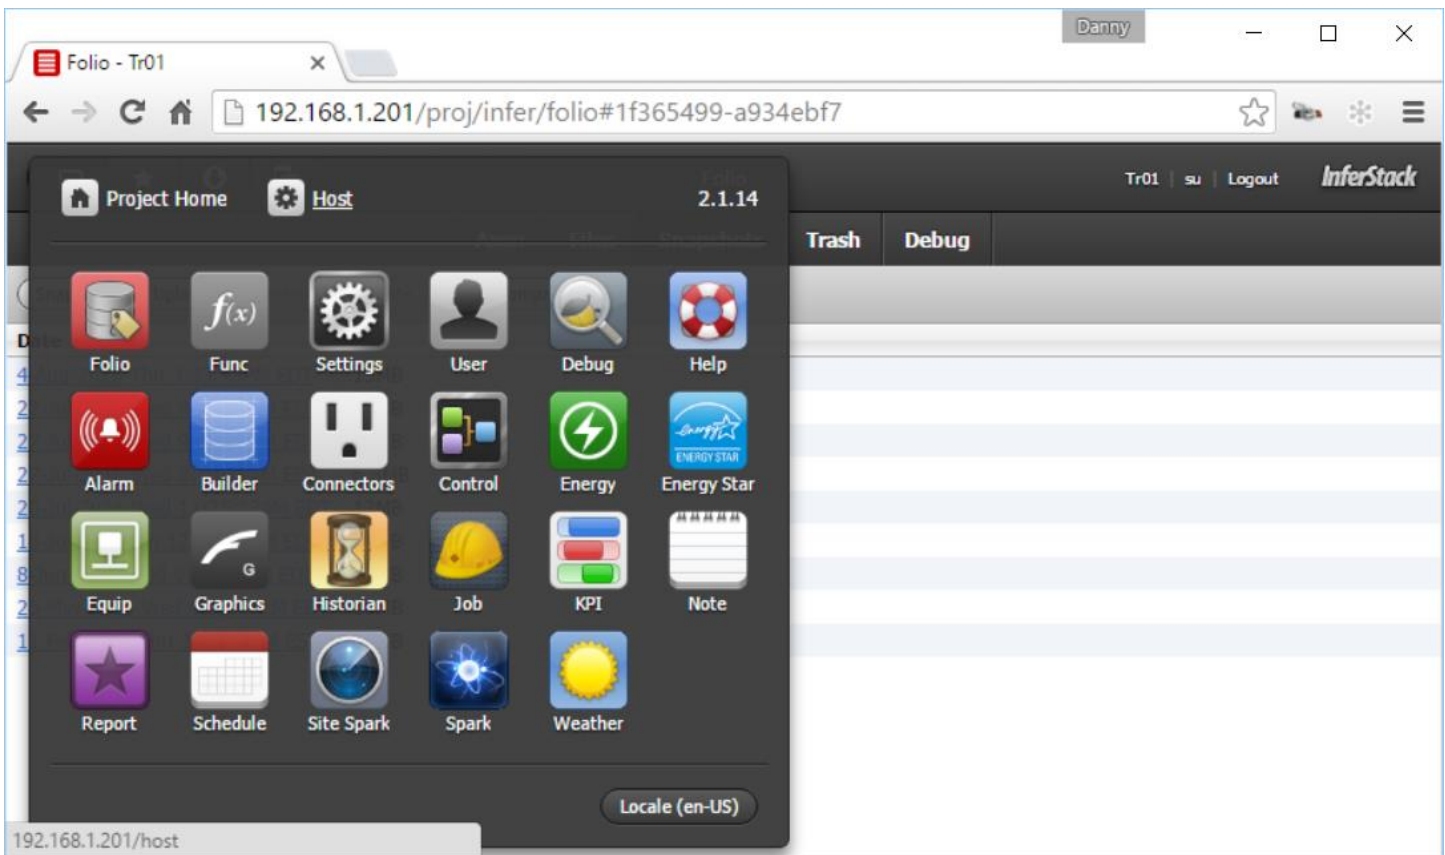Select Host from the App Header.

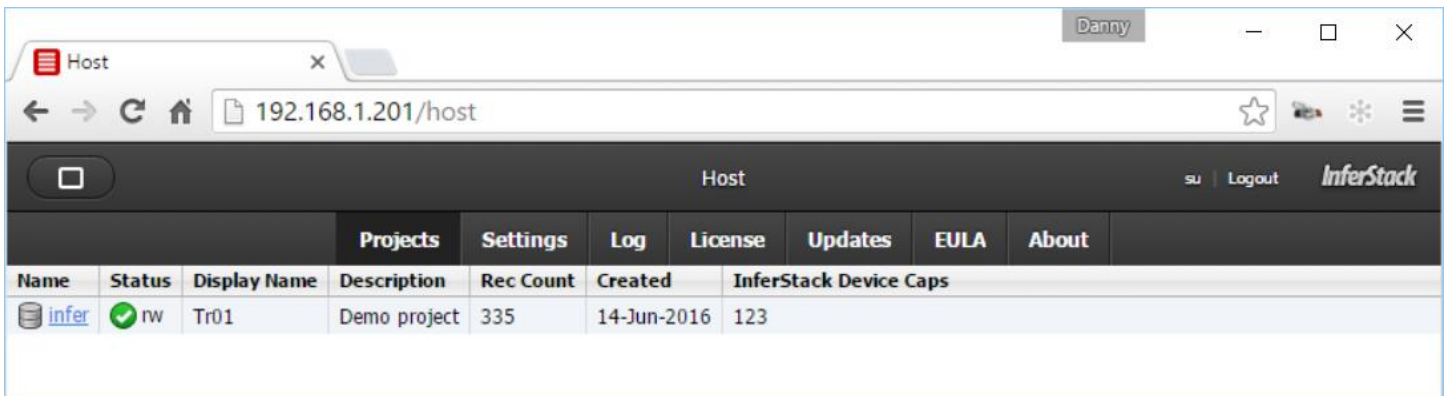




The screenshot shows a web browser window with the URL `192.168.1.201/host`. The page title is "Host" and the user is logged in as "Danny". The navigation menu includes "Projects", "Settings", "Log", "License", "Updates", "EULA", and "About". The "Updates" menu item is highlighted. Below the menu is a table with the following data:

Name	Status	Display Name	Description	Rec Count	Created	InferStack Device Caps
 infer	 rw	Tr01	Demo project	335	14-Jun-2016	123


Select Updates from the menu at the top:

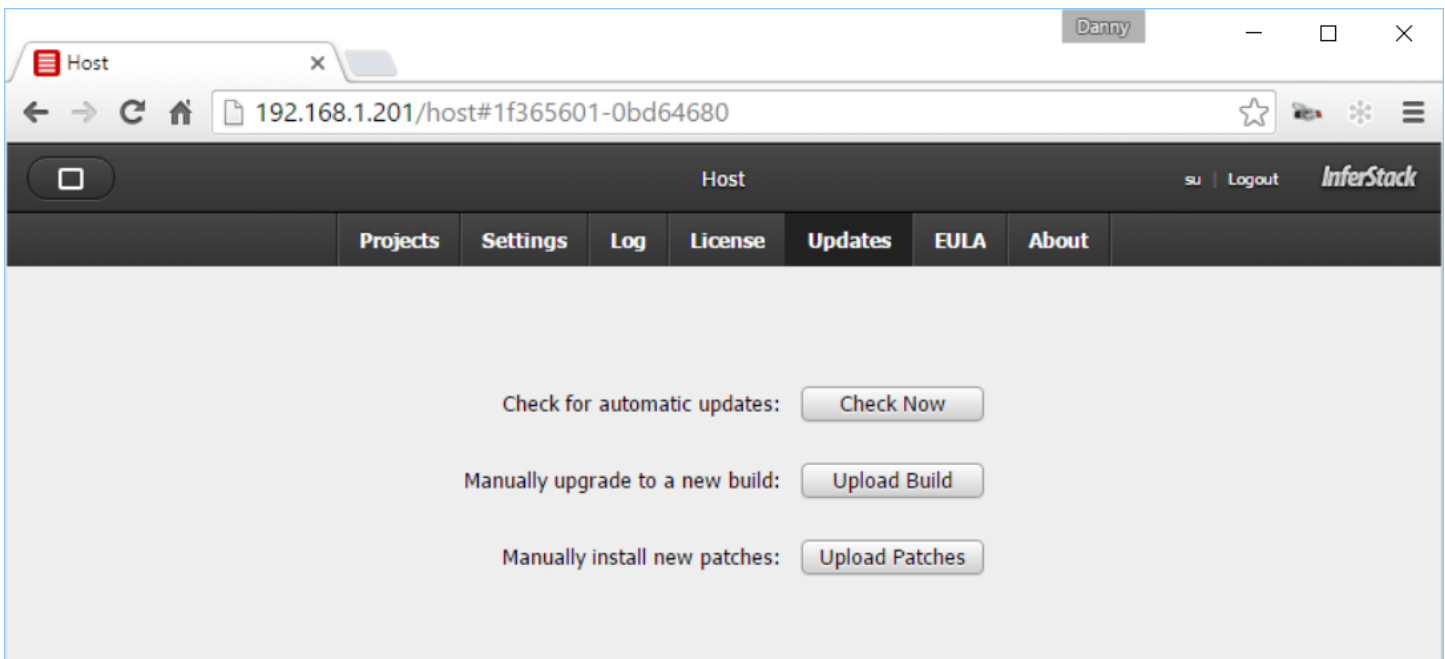


The screenshot shows the same web browser window, but the URL is now `192.168.1.201/host#1f365601-0bd64680`. The "Updates" menu item is still highlighted. The main content area displays three options for updating the device:

- Check for automatic updates:
- Manually upgrade to a new build:
- Manually install new patches:

Select Check Now (for automatic updates), Upload Build (if you have a full build) or Upload Patches if you have pod files:

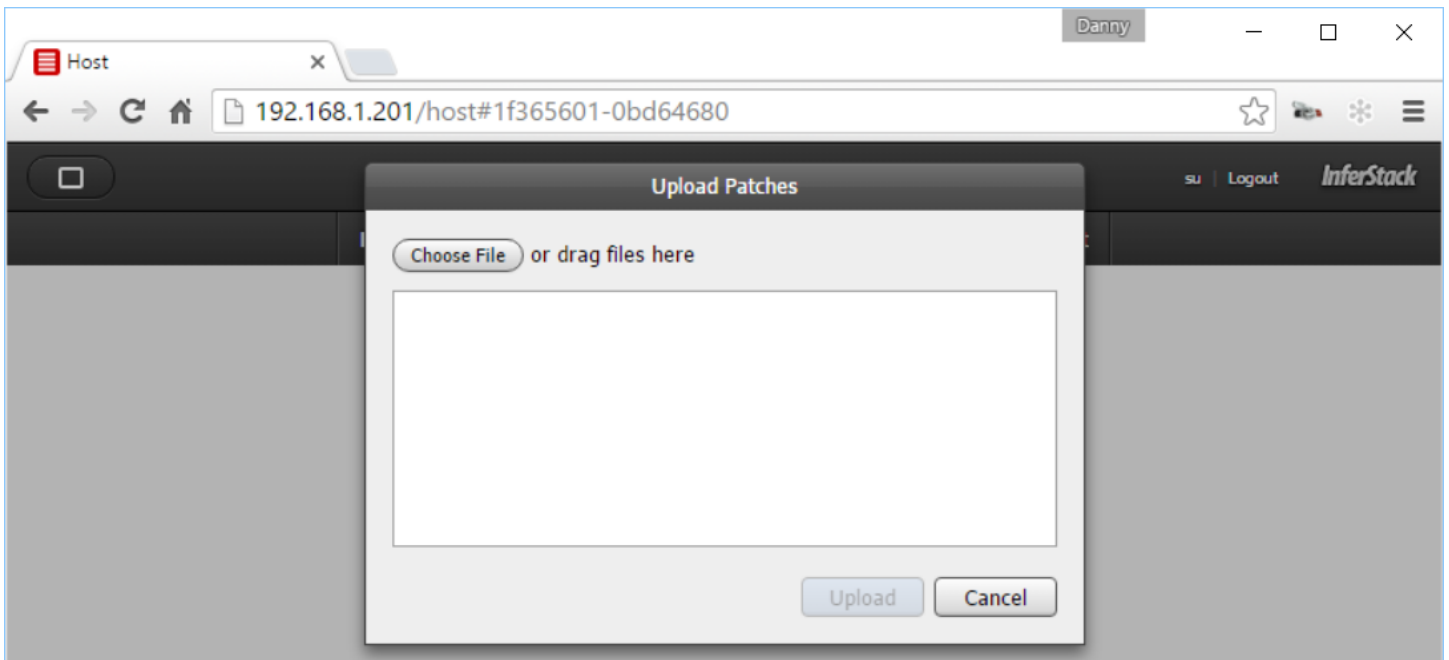

Drag your file or files to the window (you should upload all patches simultaneously):

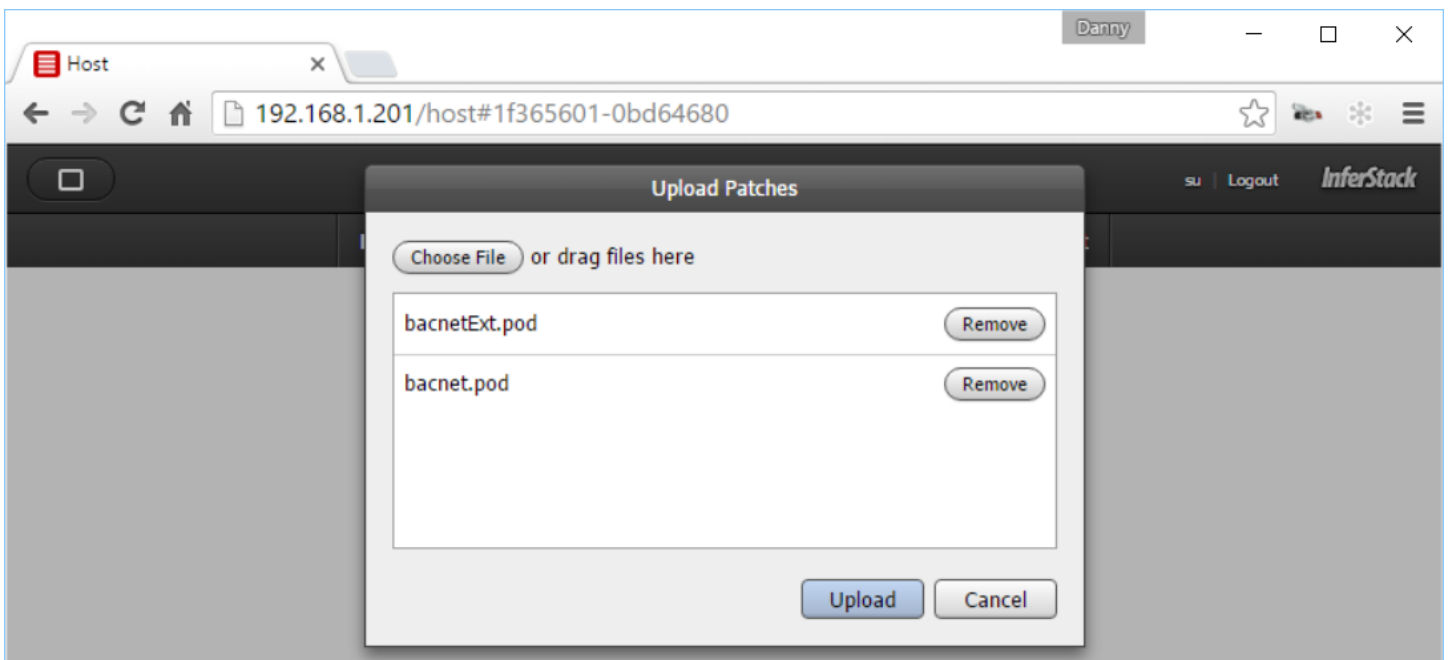


Press Upload to upload the new build. It will begin uploading. Once complete it will ask to reboot. Wait for reboot to complete:


Restoring Your Database

If your database is not functional after the upgrade, you can restore it.

1. Go to the Folio app and press the Snapshots tab

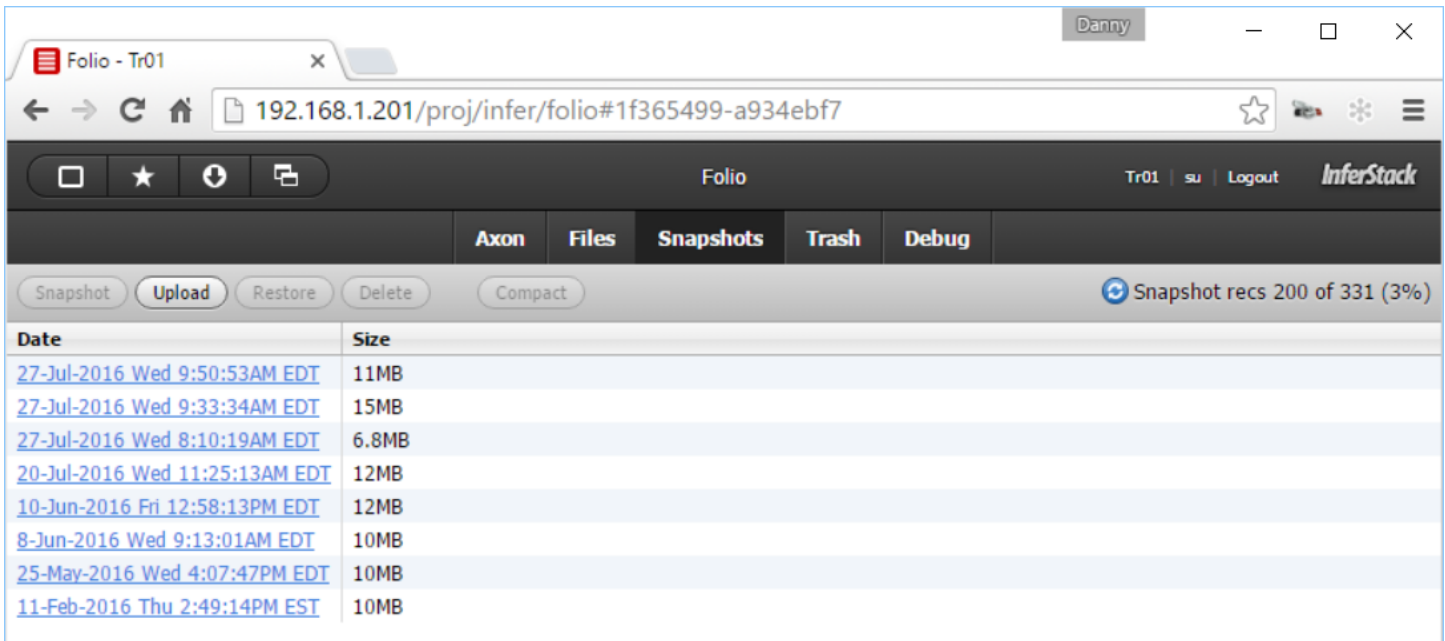

2. Press Upload and then Choose File or drag your zip to restore.
3. Select a database to restore and then press Restore.

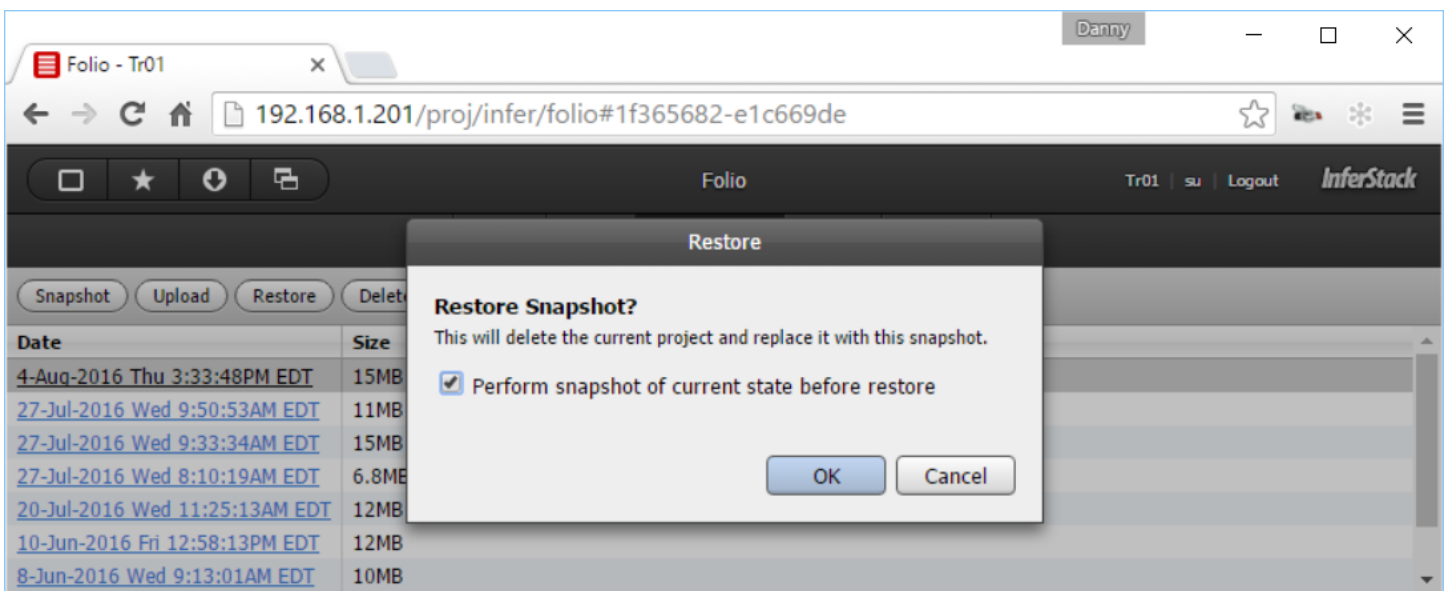

Note: You should reboot your device after restoring a database.



Reference

There are a number of references available on your device or server in the Help app.

Online docs are available at <http://licensing.intellastar.com/doc/>.